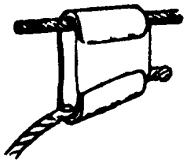

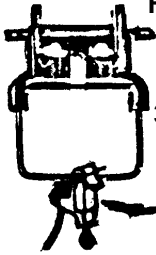

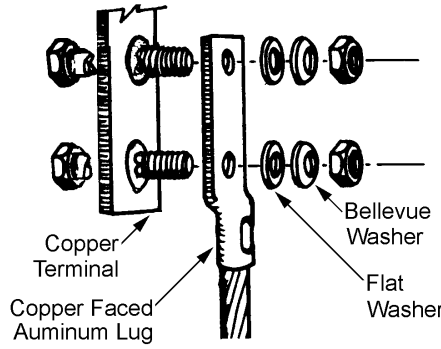
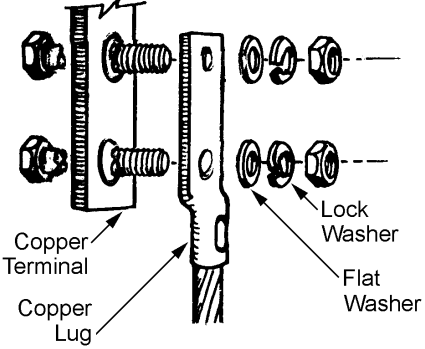


DISTRIBUTION LINE CONNECTIONS

CONNECTOR

APPLICATION	Aluminum Feeders	Copper Feeders									
<p>Feeder Corners Switches C.B.'s Unfused Laterals Unfused U.G. Taps Sectionalizers</p>	<p>Ampact Tap See D14-1</p> 	<p>Ampact Tap or 2-Bolt Bronze</p> 									
<p>26 kV Only</p> <p>Transformers Fused Laterals Fused U.G. Taps</p>	<p>Stirrup and Bronze Hot Line Clamp</p>  <p>Stirrup Stock No. 397.5-954 580678</p> <p>#2/0 Bail Use 580725E or 580727</p>	<p>Bronze Hot Line Clamp</p>  <p>Conductor Size</p> <table border="1"> <thead> <tr> <th>Stock No.</th> <th>Main</th> <th>Tap</th> </tr> </thead> <tbody> <tr> <td>580725E</td> <td>#8 Sol to 2/0</td> <td>#8 Sol to 2/0</td> </tr> <tr> <td>580727</td> <td>#6 to 400</td> <td>#6 Sol to 4/0</td> </tr> </tbody> </table>	Stock No.	Main	Tap	580725E	#8 Sol to 2/0	#8 Sol to 2/0	580727	#6 to 400	#6 Sol to 4/0
Stock No.	Main	Tap									
580725E	#8 Sol to 2/0	#8 Sol to 2/0									
580727	#6 to 400	#6 Sol to 4/0									
<p>Bolted Connections</p>	<p>Aluminum to Copper See D14-4</p>  <p>Copper Terminal Copper Faced Aluminum Lug Bellevue Washer Flat Washer</p> <p>Aluminum Jumper</p>	<p>Copper to Copper See D14-4</p>  <p>Copper Terminal Copper Lug Lock Washer Flat Washer</p> <p>Copper Jumper</p>									

ORIGINATOR	STANDARDS COORDINATOR	STANDARDS SUPERVISOR	UNIT DIRECTOR
<i>Jim S. Horn</i>	<i>Charles L. Shaffer</i>	<i>John Schinner</i>	<i>Harold Juy</i>